


# Uppstart

## CliWi Heat Exchanger



Svensk version:

- Koppla in "TUR" först, sedan "RETUR"
- Innan sista kopplingen mot "objektet" kopplas ihop, öppna flödet och släpp igenom vatten så detta står fram till sista kopplingen.
- Har du inget tryck så måste vattenslang kopplas för att fylla system.
  - Kran märkt "Påfyllning/Avtappning"
- Lufta systemet med "Luftning Topp"
- När system är luftat så kopplas elen på.
- Kontrollera att pump står på MAX och grön lampa lyser.
- För att ändra värde tryck på pil. "0-8ggr" se bilder.

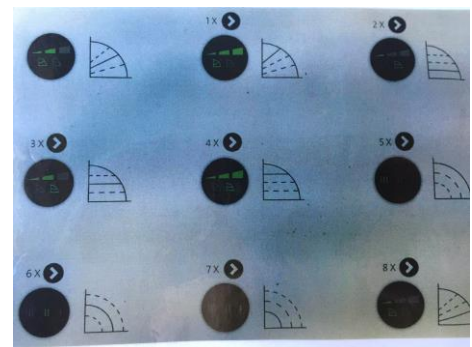

English version:

- First connect "TUR" then "RETUR"
- Before last coupling is connected to "Object" open flow and let water pass thru to the last coupling.
- If there isn't any pressure you must connect water hose to fill the system.
  - Tap market "Påfyllning/Avtappning"
- Bleed the system with "Luftning Topp"
- When system is aired, only then is electricity switched on.
- Check that pump is on MAX and you have green light.
- To adjust the settings press on arrow. "0-8 times" (see pics)

